



Thermal controls

Telephone: 01200 - 425070

Fax No. : 01200 - 423070

Storage
Heater
Spares

Capri Electrical Developments Limited

Director: A. Taylor

WHEATSHEAF HOUSE

45/47, WHALLEY ROAD

CLITHEROE

LANCASHIRE

BB7 1EE

OPERATING INSTRUCTIONS FOR STORAD SRC252 & SRC333 MODELS

These heaters comprise of both:

Storage - (uses economy 7 night rate electricity) and

Convactor (uses day rate electricity) sections

Storage Controls

In these radiators there are two elements giving the user the option of three heat settings.

- 1 - Using one element of 900W (SRC252) or 1400W (SRC333) switched on or off by the rocker switch giving the low setting.
- 2 - Using one element of 1500W (SRC252) or 1900W (SRC333) switched on or off by the other rocker switch giving the 'medium' setting.
- 3 - Plus the combination of both rocker switches being switched on giving the 'High' setting of 2500W (SRC252) or 3300W (SRC333)

Convactor Controls

The energy regulator (operated by turning the Knob on the LHS of the heater) can be used to give continuous output from the convactor element or the output can be reduced as required. The bottom neon light indicating the length of time the element is actually energised.